

QUICKSTART

KM 130/300 R BP




Warning

These are only brief instructions! Please read the operating instructions accompanying the appliance prior to using or maintaining the appliance.

The non-compliance with the operating and safety instructions may lead to damage of the appliance and to risks for the operator and other persons.

Start up

1

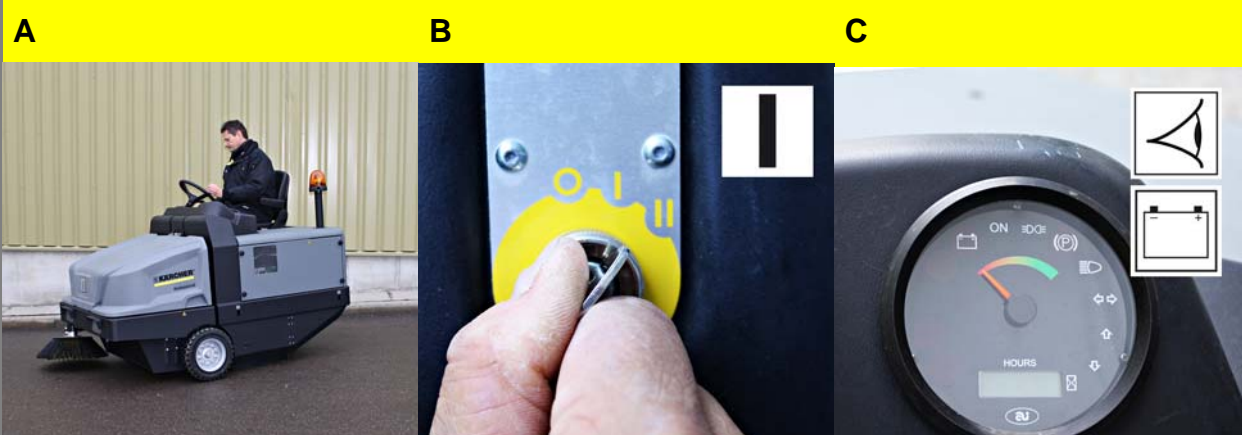

- A Sit on the driver seat.
- B Turn the ignition key to position "I".

Note

The indicator of the battery capacity will show the actual charge status after approx. 10 seconds.

- C Check charge of battery; charge it if necessary.

2



- A Check the wheels for tied up belts.
- B Check roller brush.
- C Check side brush.

3



- A Pull seat adjustment lever outwards.
- B Move seat, release lever and lock in place.
Check that the seat is properly locked in position by attempting to move it backwards and forwards.
- C Adjust the seat back.


Operation

1



Starting the machine

- A Sit on the driver's seat. Do not press the accelerator pedal.
- B Lock parking brake.
- C Bring the direction selector switch into the middle position.
- D Insert the ignition key into the ignition switch. Turn the ignition key to position "I". The appliance is now ready for operation.
- E Turn the ignition key to position "II". The appliance can now be driven.

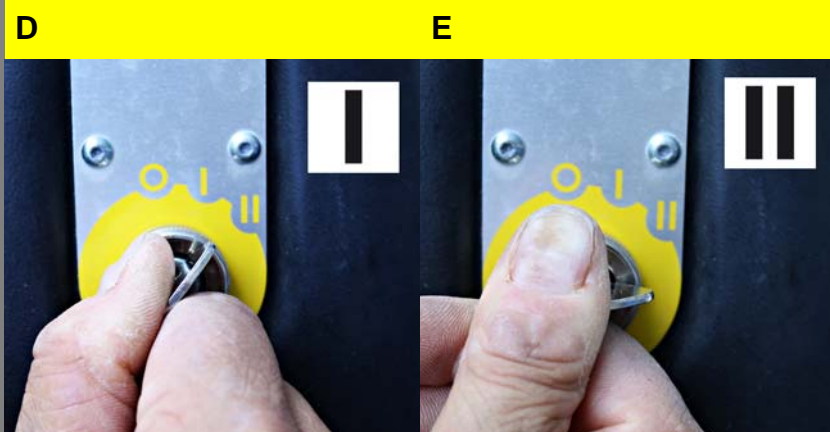

2



Drive the machine

- A Set programme switch to step 1 (driving).
- B Press brake pedal and keep it depressed.
- C Release parking brake.

Drive forward

- D Set the travel direction switch to "forward".
- E Press accelerator pedal down slowly.

Reverse drive

⚠ **Danger**

Risk of injury! While reversing, ensure that there is nobody in the way, ask them to move if somebody is around.

- F Set the travel direction switch to "backwards".


- G Press accelerator pedal down slowly.

Brakes


- H Release the accelerator pedal, the machine brakes automatically and stops.

Note

The braking effect can be supported by pressing the brake pedal.

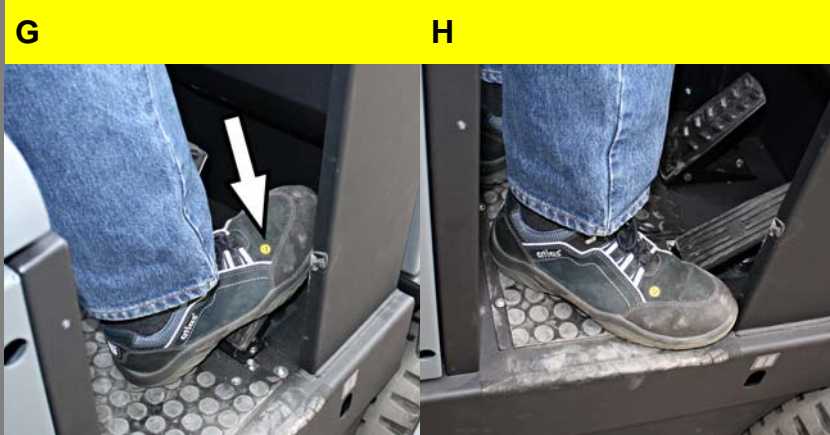

Operation

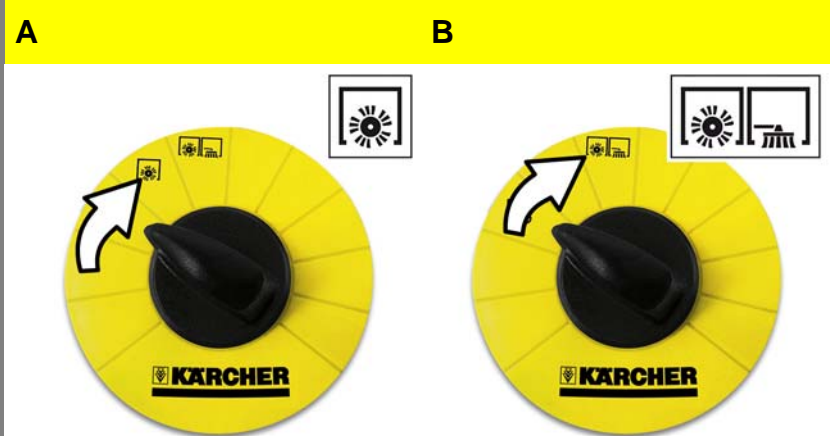3


Sweeping mode

Sweeping with sweep roller

- A Set programme switch to stage 2.
Roller brush is lowered.

Sweeping using roller brush and side brushes

- B Set programme switch to step 3.
Side brushes and roller brush are lowered.

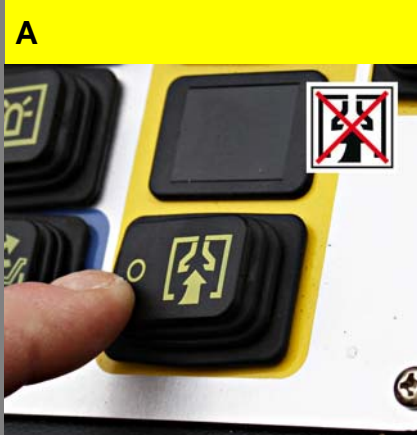4

Sweeping damp or wet floors

- A Switch off the blower.

5

Cleaning the dust filter

- A Press the switch of the dust filter cleaning system.


6

Operation with beacon lamp

- A Switch on the beacon lamp.

Operation

7

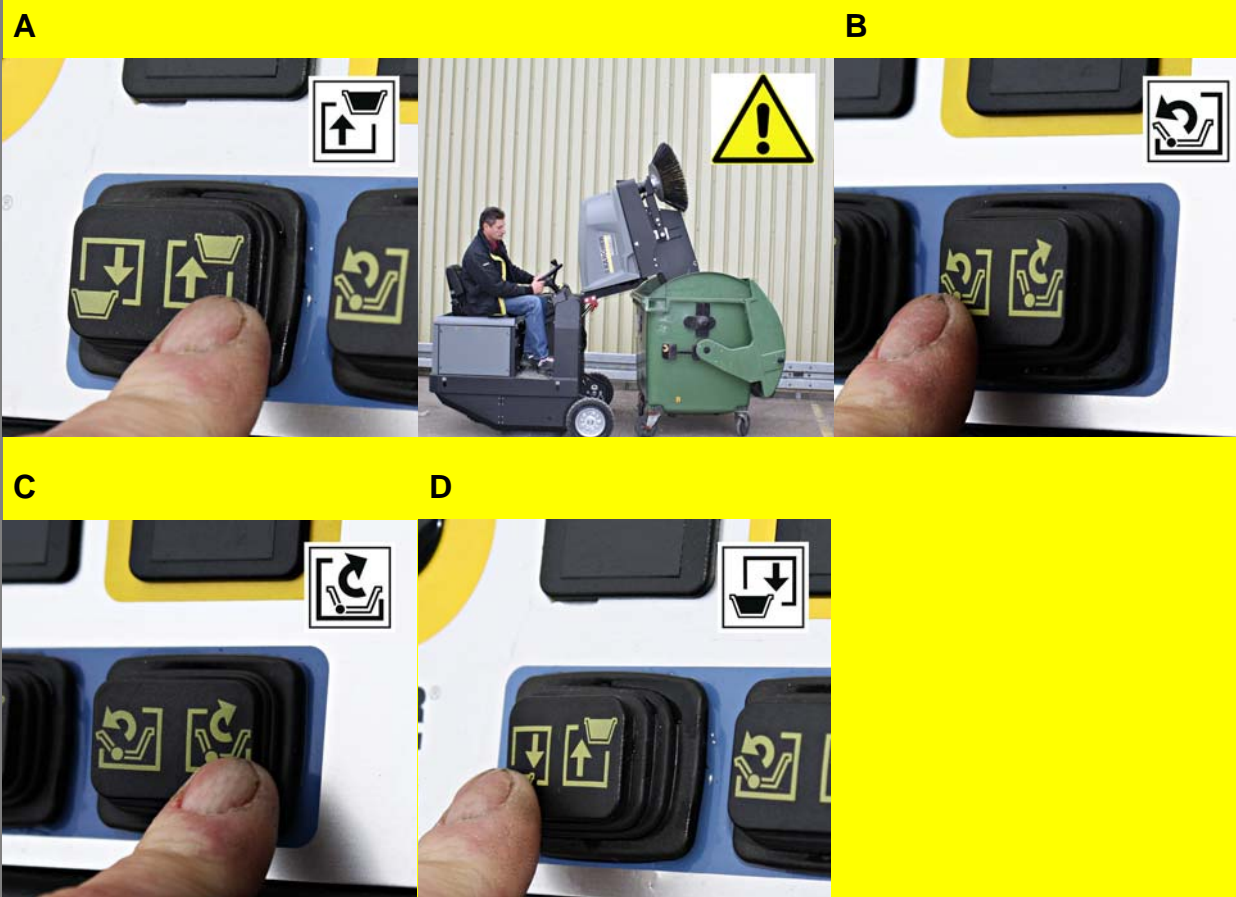

Emptying waste container

⚠ Danger

Risk of injury! When emptying the waste container, care should be taken to ensure that no persons or animals are within its swivelling range.

⚠ Danger

Danger of crushing. Never reach into the rod assembly for the drainage mechanism. Stay away from the area under the raised container.

⚠ Danger

Danger of tipping. Place the machine on an even surface during emptying.

- A Raise waste container.
Slowly drive up to the collecting container.
- Lock parking brake.
- B Open the flap of the waste container.
- C Close the flap of the waste container.
Release parking brake.
Drive away the collection container slowly.
- D Lower the waste container up to the end-position.

Finish operation

1



Emptying waste container

See "Operation", item 7.

2



Turn off the appliance

- A Set programme switch to stage 1 (driving).
The side brushes and roller brush are raised.
- B Press brake pedal and keep it depressed.
Lock parking brake.
- C Turn ignition key to "0" and remove it.

Maintenance and care

daily

weekly

Kärcher Customer Service

1

A

A Check function of all control elements.

B Inspect appliance for damage.

2

A

B



A Check the hydraulic oil level.

B Check brake fluid status.

⚠ Danger

Risk of injury! Always insert the safety rod when the waste container is raised.

3

A

B



A Check dust filter and clean filter box, if required.

B Clean the machine with a damp cloth which has been soaked in mild detergent.

Note

Do not use aggressive cleaning agents.

4

A Clean the hydraulic oil cooler.

B Check hydraulic unit.

C Check the sealing strips for wear, replace as necessary.

D Check the container lid and lubricate it.

5

See inspection checklist 5.950-648.0!